

**Instructions manual  
HESBA Combination Prams  
Condor Coupé, Corrado, and Concepto**

# Welcome to HESBA!

We are delighted that you decided to purchase a HESBA pram "Made in Germany".  
We hope you will enjoy the product and have many nice trips with your child in fresh air.

## This combination pram has the following features


1. Carrycot
2. Pram
  - 2.1 Pram with LW carrycot (light-weight carrycot)
  - 2.2 Pushchair with safety bar, restraint system and belt

## The delivery includes

1 combination pram



1 wind cover

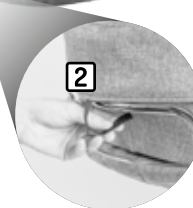

1 safety bar



1 cap for LW carrycot



## This instructions manual contains important safety instructions

Read these instructions carefully before use and keep the instructions manual.  
Failure to observe these instructions can impair the safety of your child.

**IMPORTANT:** Keep these instructions for later reference and enquiries.

When used together with the LW carrycot, this combination pram is suitable for a child of 0-6 months old and a maximum weight of 9 kg if they cannot sit independently, turn or prop themselves up onto their hands and knees.  
The pushchair attachment without the LW carrycot is suitable for a child of approx. 6 months and older and a maximum weight of 15 kg.  
Seatbelts must be used in the pushchair attachment.

1. Carrycot .....	4 – 5
2. Pram	
Pram frame .....	6
Brake and installation of wheels .....	7
Pneumatic tyres, push handle and basket .....	8
2.1 Pram with LW carrycot .....	9
2.2 Pushchair	
Safety bar, restraint system and belt .....	10
Sun protection and seating positions .....	11
Seat and cover .....	12
3. Care and safety instructions .....	13
4. Maintenance and guarantee .....	14
Separately available accessories .....	15

## Explanation of the symbols

To allow you to use these instructions quickly and clearly, we use different symbols, which have the following meaning:



**Warning**



**Safety instructions**



**Care instructions**



**Information**

# 1. Carrycot

## The carrycot is especially important during the first weeks.

If your baby has fallen asleep in the pram after an outing, you can carry them into the house in the LW carrycot without waking them up. The HESBA LW carrycot always stays in a horizontal position, which promotes a healthy development of your child.

The inside dimensions of the LW carrycot are 80 x 35 x 22 cm and there is enough room for your baby to lie comfortably during the first months.



### Warning according to DIN EN 1466:2015-02

- When using the LW carrycot, both straps must be connected with the press stud.
- The carrycot must only be used with the straps directed upwards and both straps must be held.
- Never pull the straps outwards during carrying. The child will no longer be safe and could fall out of the LW carrycot.
- Never use this LW carrycot on a stand.
- This product is only suitable for a child that cannot sit independently yet, roll over to one side or prop themselves up on hands and knees. Maximum weight of child: 9kg.
- Only use the carrycot on a stable, horizontal and dry surface.
- Do not let other children play near the LW carrycot without supervision.
- Do not use the LW carrycot if a part is broken, torn or missing.
- Do not leave the flexible carrying straps inside the LW carrycot.
- Do not use the LW carrycot if the child can sit up without assistance.
- Never place the carrycot near an open fire or other heat sources.
- Regularly check the straps and the bottom of the carrycot for damage and signs of wear.




### Safety instruction

- In the LW carrycot, the child's head should never be lower than the body.
- Do not place an additional mattress on the mattress in the carrycot.
- Max. height of mattress: 3 cm

# 1. Carrycot

## Description

The cap can be attached and removed from the LW carrycot using the two press studs **1**.  
The LW carrycot can be used with and without cap.

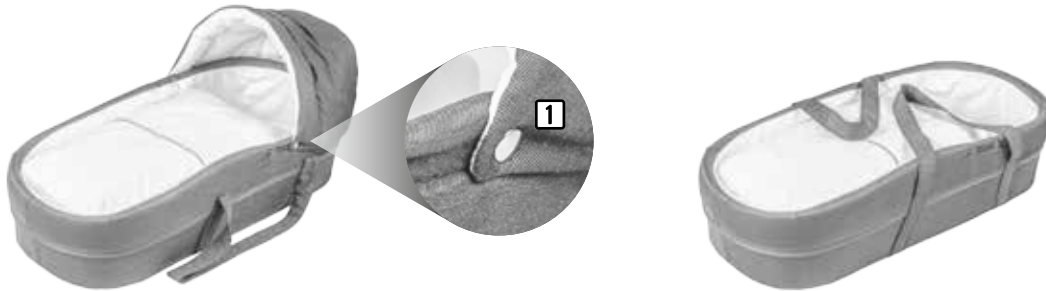

When the LW carrycot gets too small after a few months, the cap of the LW carrycot can be attached as extension to the lower part of the pushchair attachment **2**, which enlarges the inside area of the pram. The pram is then used without the LW carrycot.

Alternatively, an extension part **3** can be ordered as accessory in the pram colour, which can be attached to the pushchair attachment.



## Warning

This feature can only be used while the child cannot sit independently, roll on the side or prop themselves up on hands and knees.  
Secure your child with the belt when using this feature.

## Care instructions

The mattress cover of our comfort mattress and the lining of the „wash“ version of the LW carrycot can be removed and washed in the washing machine at 30° using a mild detergent. Do not spin. Not suitable for tumble dryers. Velcro® straps must be closed.



## 2. Pram – pram frame

### **Warning**

Make sure that your child is out of reach when folding and unfolding the pram to avoid injuries.

 
 
### **Safety instruction**


- Always make sure that the safety bar encloses the tube.
- The safety bar and the two plastic rings prevent unwanted collapsing of the pram.
- Before using the pram, always make sure that both frame locks are in their locked positions.


### **Unfolding the frame**

Engage the brake system. Open the frame by pulling the push handle upwards. The push handle clicks into place automatically when unfolding the frame. To make the pram ready for use, the two black plastic rings must be pushed over the push handle tubes on the right and on the left. The frame is now ready for use.

### **Folding the frame**

 Before folding the pram, always engage the brake. To fold the pram frame, the safety bar  must be unlocked on the right and the two black plastic rings  must be pushed upwards on the right and left of the frame.

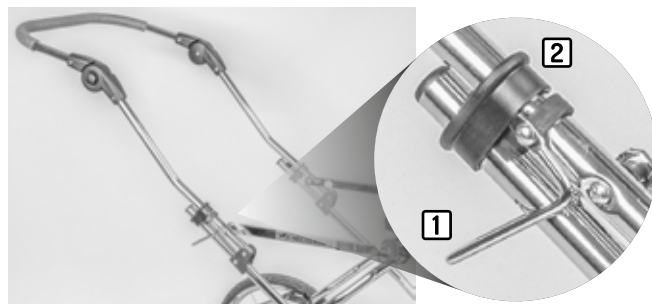

After unlocking, the pram can be folded easily by moving the push handle  forwards.

The frame can be folded and unfolded in the same way when using the pram attachment.



### **Recommendation**

The model Corrado only folds together completely with the pram attachment when the canopy is **not** located at the push handle side since the push handle cannot be pushed past the side clamp of the canopy.

## 2. Pram – brake and installation of wheels




 
### Safety instructions

The brake must be engaged when you

- stop the pram, even if it is only for a short time


- sit the child up in the pram or take it out


### Engaging and releasing the brake with 250 mm rims


When using wheels with a 250 mm rim, the brake can be engaged by pushing the brake rod down  with the foot and released by reversing this action and pushing the rod up .



### Engaging and releasing the brake with 300 mm rims

When using wheels with 300 mm rims, the brake rod must be engaged by pushing the straight part of the rod .

The so-called u-brake is released by stepping on the opening (=u-angle)  of the brake rod.

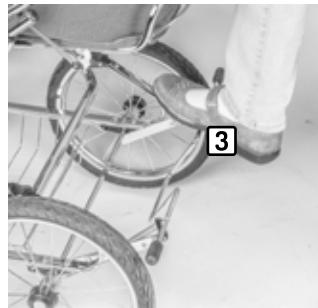

### Installation of the wheels

You can select one of two rim sizes during purchase

- 250 mm
- 300 mm



as well as 2 tyre types



- black air chamber tyres without tyre tube SL
- white EVA tyres

Remove the plastic cover from the frame shafts. Keep for future storage.

### Warning

Danger of suffocation. Keep the plastic covers and plastic bags outside the reach of children.

Make sure that the brake system is released. Press the bar  at the wheel hub and hold it while pushing the wheel onto the shaft . Release the bar and pull the wheel towards you until you hear it click in place. Pull again to ensure that the wheel is secured. Repeat this procedure for all four wheels.

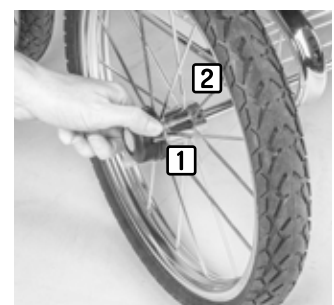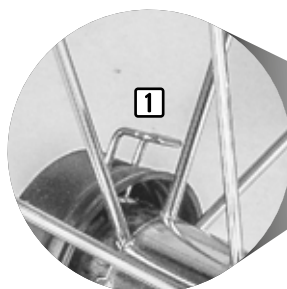



## 2. Pram – wheels, push handle and basket

### Wheels

#### Note

- We recommend our black SL wheels, because these tubeless wheels have the comfort of a pneumatic tyre and they have the advantage, that they do not have to be inflated.
- Unfortunately pram wheels cannot be balanced like the tyres of a car. Therefore they can show a slight radial run-out (“they wobble”, i.e. they become misaligned). In this regard we cannot provide any warranty.

Applies to all models with pneumatic tyres

- The pneumatic tyres can be inflated with an air pump.
- The pressure must be correct for optimal handling qualities and to avoid flat tyres.  
Therefore, check the tyre pressure regularly. The pressure must not exceed 30 PSI / 2.0 bar.
- The tyres may show little cracks due to the effect of ozone and UV radiation.  
This does not impair the handling qualities and safety of the pram and is no reason for rejection.

Applies to EVA wheels


The elegant hard rubber tyres are less durable have a lower damping property as for example our wheels without tyre tube or pneumatic tyres. For this reason we recommend this wheel type as an elegant second wheel. Colour: white.

#### Warning

- Do not go over sharp edges or surfaces with broken glass as this may puncture the pneumatic tyres.
- Please also keep in mind that the tyres can stain surfaces. Therefore, do not place the pram on light floor surfaces or lay them on the fabric covers of the pram.
- On principle, please act carefully at kerbstones or stairs and don't let the pram sag too strongly. As there is a multiple of weight on the push handle, the braking axle and the wheels, a break of the braking axle and also of the spokes may occur.

### Push handle

Adjusting the push handle height

By simultaneously pressing the two pushbuttons  at the right and left of the joint, the height of the push handle can be adjusted.



### Basket

The basket at the bottom of the frame can be loaded with a maximum weight of 5 kg. Always place heavy items in the middle of the basket. The pram can become unstable if the weight in the basket is distributed unevenly. A matching shopping bag for the basket is available as accessory.



## 2.1 Pram with LW carrycot




### Description

The pram attachment is fastened to the frame in 4 positions. There are two grooves **1** on each side of the frame.



#### Practical tip

Simple assembly of the pram attachment on the frame.


YouTube: [https://youtu.be/\\_13n8sJ4SW0](https://youtu.be/_13n8sJ4SW0)

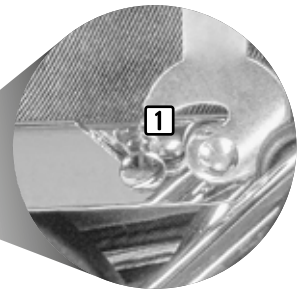

Once the attachment is positioned correctly with the four fastening bolts in all four grooves, the two locking levers at the right and left of the frame must be moved to the "closed" position **2** to fasten and firmly anchor the pram. The attachment is now firmly connected to the frame. For unlocking, the black safety bar behind the locking bar must be moved to a vertical position **3**.

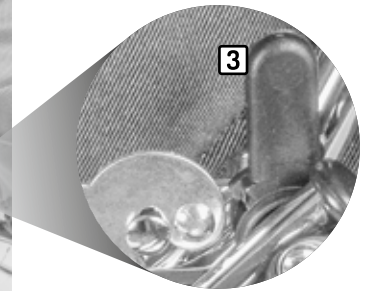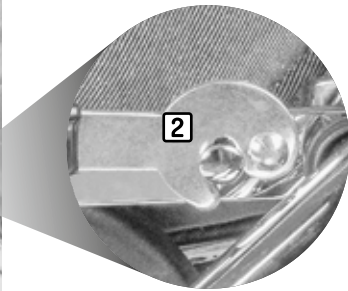


When using the product as pram, the foot rest must always be in a horizontal position and fastened with the safety bar **4** so that the LW carrycot is positioned correctly and fastened.

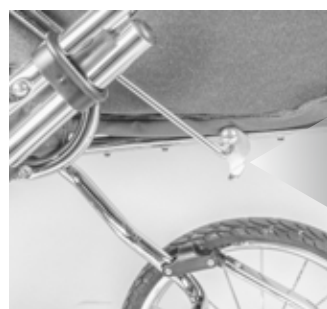

Fastening the LW carrycot:

To connect the LW carrycot firmly with the pushchair attachment, the press studs **5** on the right and left as well as in the front and rear of the carrying straps of the LW carrycot must be attached to the counterparts at the pushchair.

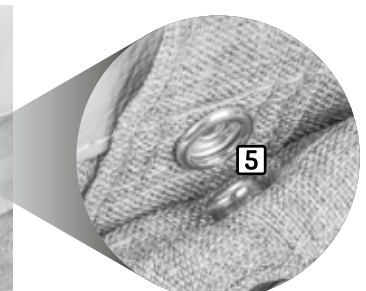

#### Safety instruction

- The LW carrycot can topple if the foot rest is not fastened.
- In order not to impair the toppling protection, a shopping bag or other bag must not be put on the push handle and an additional seat for a second child must not be added to the attachment.

## 2.2 Pushchair – safety bar, restraint system and belt

### Pushchair attachment

As soon as your child can sit independently, you can omit the LW carrycot and put your child in the pushchair attachment. The pushchair attachment can be positioned in two directions.

At first, children prefer to look at their “driver”. However, after a certain age, children become curious and want to see their surroundings more. The position of the attachment can now be changed. To do this, the locking lever and the black safety bar are opened as described above and the attachment can be removed from the frame. The pushchair attachment can be rotated by 180° and then re-attached as described earlier.



Pushchair away from the direction of travel





Pushchair in direction of travel



Always make sure that the fabric cover of the foot rest is always aligned with the foot rest of the pushchair. Always leave the elastic strap under the foot rest.

### Belt and safety bar

When using the pushchair attachment, your child must be secured with the belt ① and the safety bar ② can be attached to the pushchair. The safety bar must be clicked into place in the plastic holder ③ at the front of the round tube frame. The belt must secure the shoulders of your child and firmly latch into place in the front.

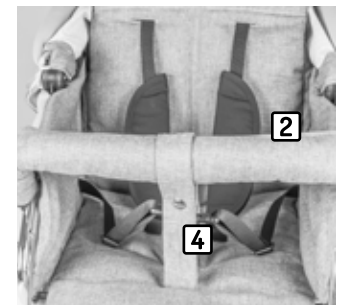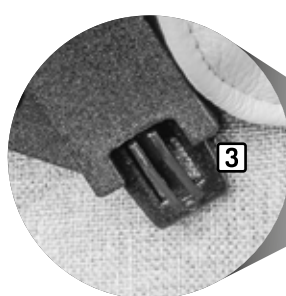

This function is also possible: click the safety bar into place as described above and attach the crotch strap ④ to the safety belt using the press stud.




### Care instructions

The strap pads can be removed and washed at 30°.

The belt system is built in and ready for use. It can be found under the LW carrycot.

The belt is opened by pressing the centre piece ⑤ of the buckle, which releases the belts. The belt is fastened in reverse order by clicking the plastic parts of the belt into the centre piece. The length can be adjusted with the small buckles so that the belt is not too loose.

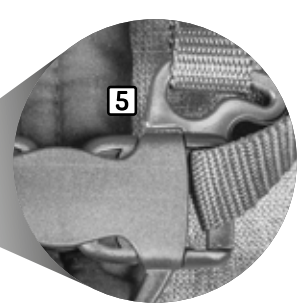



### Sun protection

#### Recommendation

In addition to the canopy, a parasol can also be used. Parasols are available in the colour of your pram and not included in the delivery. Only exterior fabrics provide UV protection.
 
### Seating position

The backrest of the pushchair can be positioned in 5 different heights. To do this, the bracket at the backrest  must be lifted slightly and clicked back into place in the desired position.

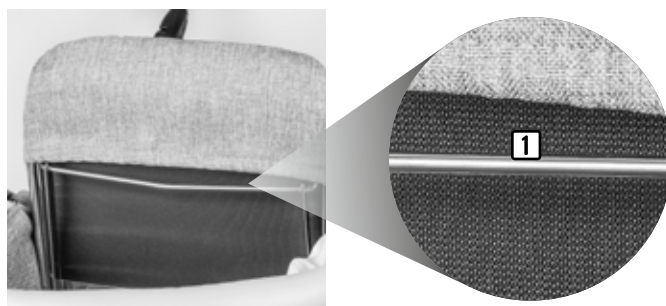

#### Safety instructions

- The bar must be pulled at its centre.
- The height of the seat must never be adjusted without lifting the bar.

#### Warning

- This product is not suitable for jogging or rollerblading.
- Do not leave your child without supervision.
- Before use, make sure that all locks are engaged.
- Make sure that your child is out of reach when folding and unfolding the pram to avoid injuries.
- Do not let your child play with the pram.
- Use a safety belt as soon as your child can sit independently.
- Always use the belt system with the safety bar when using the pushchair.
- Before use, make sure that the pram attachment is secured correctly.

#### Care instructions

Seat, belt cushion and the cover of the safety bar can be washed at 30° using a mild detergent.

 
Do not spin. Not suitable for tumble dryers.

Seats with leather or leather parts are **not** washable at 30° but can be wiped.



## 2.2 Pushchair – seat and canopy



### Washable seat

When removing the seat, the elastic strap at the foot rest must first be loosened. Afterwards, loosen the Velcro®  strap at the front of the seat and the two carrying straps from the attachment frame. Seats with leather or leather parts are **not** washable.




### Canopy

Depending on the model, the canopy can be put in different positions with a locking function (models Condor Coupé and Concepto) or with the side clamp (model Corrado).

If the tension of the screwed, silent canopy models Condor or Concepto declines, the safety nuts  inside can be tightened again. Afterwards, close the canopy cover with the Velcro® strap .



### Removing the canopy

To remove the canopy, the tensioned canopy holders can be released by pressing the plastic buckle  under the strap at the side. Release the two hooks at the back of the backrest from the loops. For the canopy type Corrado, the black knurled screws at the side of the canopy frame must be loosened and then the canopy can be removed. Screw the knurled screws back onto the threaded bolt so that you do not lose them.



### Note on canopy model Corrado

The side clamps at the right and the left side of the canopy must always be applied synchronously with both hands as otherwise the inside brackets of the canopy can shift! When using the Corrado as a pushchair, the canopy has to be moved backwards by at least 3 cm, as otherwise the backrest cannot be positioned upwards. For this open the side star-grip nuts and move the canopy backwards on each side evenly. Secure the nuts by retightening them. For folding the canopy both clamping brackets have to be pressed evenly. For this only move or pull the canopy backwards with the front bracket. **ATTENTION:** When pressing the rear interior brackets the canopy may shift.

### Note moisture protection

A rain cover is included in the delivery, which can be used for all parts. To hold off the rain we recommend a rain cape, that is available as accessory. However, if the pram gets wet, please dry the pram immediately and completely with opened canopy.

### Warnings about the rain cape

- Danger of suffocation. Keep the rain cape away from your child.
- Be especially careful when using the rain cape in strong wind.



### Care instructions

Always protect the pram from too much sun.

#### CARE INSTRUCTIONS FOR FABRICS

- Dust and little dirt can be removed with a soft cloth or a soft brush.
- Larger stains or dirt can be removed with a soap solution up to 30° and a soft cloth.
- Do not use cleaning agents with bleaching effects or solvents.
- Do not leave the pram in the sun, the fabric will become lighter when exposed to the sun.

#### CARE INSTRUCTIONS FOR WHEELS

- See fabrics; a soft brush can be used for wheels.
- The tyre pressure must be checked regularly but must not exceed 30 PSI / 2.0 bar.
- To get a permanent comfort the tyres should be treated with a silicon-free spray on the axle.

#### CARE INSTRUCTIONS FOR FRAME / CHROME

- Use a soft cloth to clean the frame.
- The chrome-plated parts and parts with bright zinc coating should be regularly treated with a commercially available cleaning or polishing agent to maintain the shine of the surface and to avoid rust. We recommend "Sidel-Metallpolitur" or „Elsterglanz/ Ahrenshof“.
- Road salt residues must be removed immediately as the salt affects the chrome-plating!  
This also applies to tours on beaches near salt water.
- The frame was treated with rust protection to provide a proper basic protection. If not maintained properly, flash rust might occur.  
The guarantee does not apply in this case.
- All moveable parts at rivets can be kept smooth with a silicon-free spray (e.g. WD-40).



### Safety instructions according to DIN EN 1888:2012-06

- Keep in mind that there is a danger to the pram in the vicinity of open fire and other sources, strong heat such as electric radiators, gas flames, etc.
- Never place the pram near an open fire or other heat sources.
- Check the pram regularly for damage and signs of wear as well as its general functionality
- Do not use the pram when parts of it are damaged.
- Only use spare parts delivered or approved by the manufacturer
- Always make sure that the wheels are fully clicked into place
- Always make sure that the brake is engaged when you park the pram
- The pram is designed to carry a child
- Maximum weight of the child when using the LW carrycot: 9 kg
- Maximum weight of the child when using the pushchair: 15 kg
- Max. height of mattress: 3 cm
- Do not place an additional mattress on the mattress in the carrycot.



### Warning

- When adjusting adjustable elements, the child must not get in contact with moveable parts.
- If possible, avoid stairs, steps or escalators. When using an escalator, stand below the pram.
- Do not use this product in strong wind or storms.
- Please observe that train stations can cause high pressure changes in the air (wind or vacuum).  
Never place the product near train tracks without having both hands on the push handle since the brake alone may not be sufficient to keep your pram safely in its place.
- Do not cross train tracks when your child is inside the pram. The wheels can get stuck in the tracks.
- When using public transport (bus, underground, train, etc), it is not sufficient to only use the brake of the pram.  
The pram may be exposed to strong external loads (unexpected braking, corners, potholes, acceleration) for which the pram is not tested according to the pram standard EN1888. Follow the instructions for safe transport and securing of prams the operator must provide in public transport vehicles.

## 4. Maintenance and guarantee

---

### Maintenance

The user is responsible for regular maintenance and care. All connection parts must be fixed and secured.  
Locks, moveable parts and folding mechanisms should be treated regularly with silicon-free spray.  
All functional parts should be checked regularly the chrome should be maintained regularly.

### Guarantee

In accordance with legal regulations, we guarantee the function of the product described in this instructions manual with respect to occurring faults that may be attributed to manufacturing errors or material failures.  
The guarantee does not apply to damage due to improper use including damage due to falling or impacts.  
The guarantee can only be effected with a proof of purchase.  
Damage due to erroneous use is not covered by the legal guarantee but can be repaired by us for a fee.  
The warranty claim expires if the buyer himself carries out repairs or makes modifications to the product, as in this case the reason for the damage can no longer be traced back.

---

Date of purchase

---

Company stamp and dealer signature



## Separately available accessories



Customise accessories to your wish together with your specialist dealer



**ECO-MATTRESSES –  
for perfect lying comfort**  
OEKO-TEX® standard 100.



**BEDDING**  
Available to fit with the interior design of  
your pram.



**FOOT MUFFS**  
Summer and winter foot muffs can be  
ordered in the colour of the pram.



**WINTER MUFF –  
for woolly warm hands**  
It is simply attached to the push handle.



**SHOPPING BAG**  
To protect shopping and e.g. jackets in the  
metal basket and for a better storage.



**ADAPTER FOR BABY SEAT**  
Can be used for the models of  
maxi-cosi, Cybex and Kiddy



**PARASOLS –  
with exterior or interior fabric**



**CHANGING BAGS KLASSIK PLUS**  
The changing bags have a changing mat, bags for jars, holders for baby bottles and nappies,  
a removable, washable inner pocket.



**CHANGING BAGS SOFT PLUS**



**RAIN CAPE – Transparent**  
Quickly covers the entire pram and protects  
child and pram from heavy rain.



**FOOT EXTENSION PART –  
with click-in connection**



**BACK EXTENSION**



**Warning** Danger of suffocation: All accessories are delivered in plastic bags.  
Remove the plastic bag and keep it outside the reach of children.



